 


NOTICE

DO NOT AT ANY TIME ATTACH WEAR INSERT OR REMOVE WEAR INSERT FROM SEED FIRMER WHILE ATTACHED TO PLANTER. REMOVE SEED FIRMER WHILE DOING MAINTENANCE. BEWARE OF ALL PINCH POINTS. DO NOT BACKUP PLANTER WHILE FIRMER IS DOWN. ALWAYS BE MOVING FORWARD WHEN LOWERING PLANTER.




TOOL NEEDED

**INSERT & REMOVAL TOOL
(IR TOOL)**



ORDER: 1-800-860-1812

WEAR INSERT - INSTALLATION & REMOVAL INSTRUCTIONS

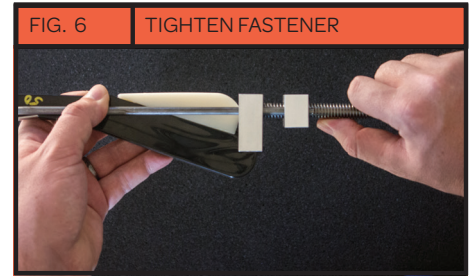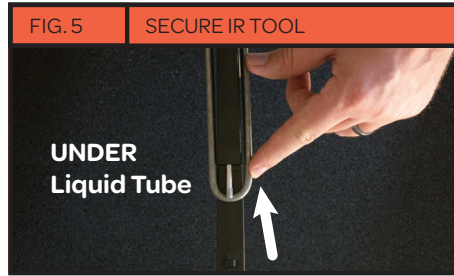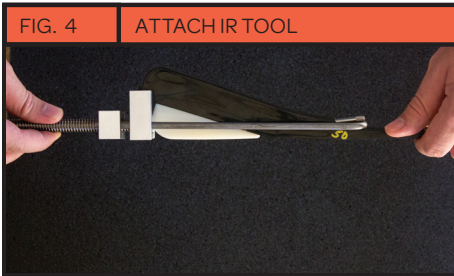


Steps

CONNECT - 1: Attach Wear Insert to Seed Firmer (fig. 1). **2:** Connect the IR Tool to the Seed Firmer and the Wear Insert (fig. 2). **3:** Tighten until the Wear Insert is tightly secured (fig. 3).

REMOVAL - 1: Attach IR Tool to the Wear Insert and **UNDER** the Seed Firmer Liquid Tube (fig. 4). **2:** The IR Tool should fasten securely **UNDER** the Liquid Tube (fig. 5) **3:** Tighten IR Tool until Wear Insert becomes loose (fig. 6).

WEAR INSERT - STOPPER

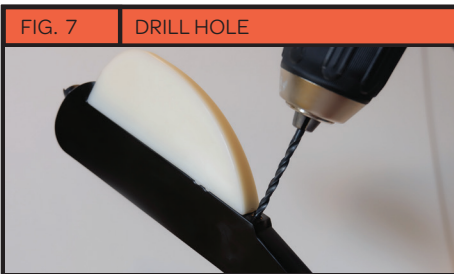


Steps

Wear Insert Stopper - 1: Use a 7/64 drill bit to drill in hole below wear insert on the seed firmer lip, drill no more than about 1/8 inch down (fig. 7), and stop drilling immediately upon sensing resistance of metal. **2:** Tighten screw (fig. 8).

WHEN DO I REPLACE THE WEAR INSERT

Replace the Wear Insert when the length of the Wear Insert is 1/8 of an inch away from the Firmer Stop.

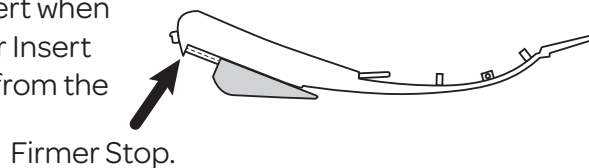

For questions, ordering, replacing, or any other inquiries please call
1-800-860-1812